

980 TTA Power cutter

Documents

Starter assy and engine

Crankcase and fuel tank

Air filter and carburettor

Arm 12

Arm 14

Arm 16

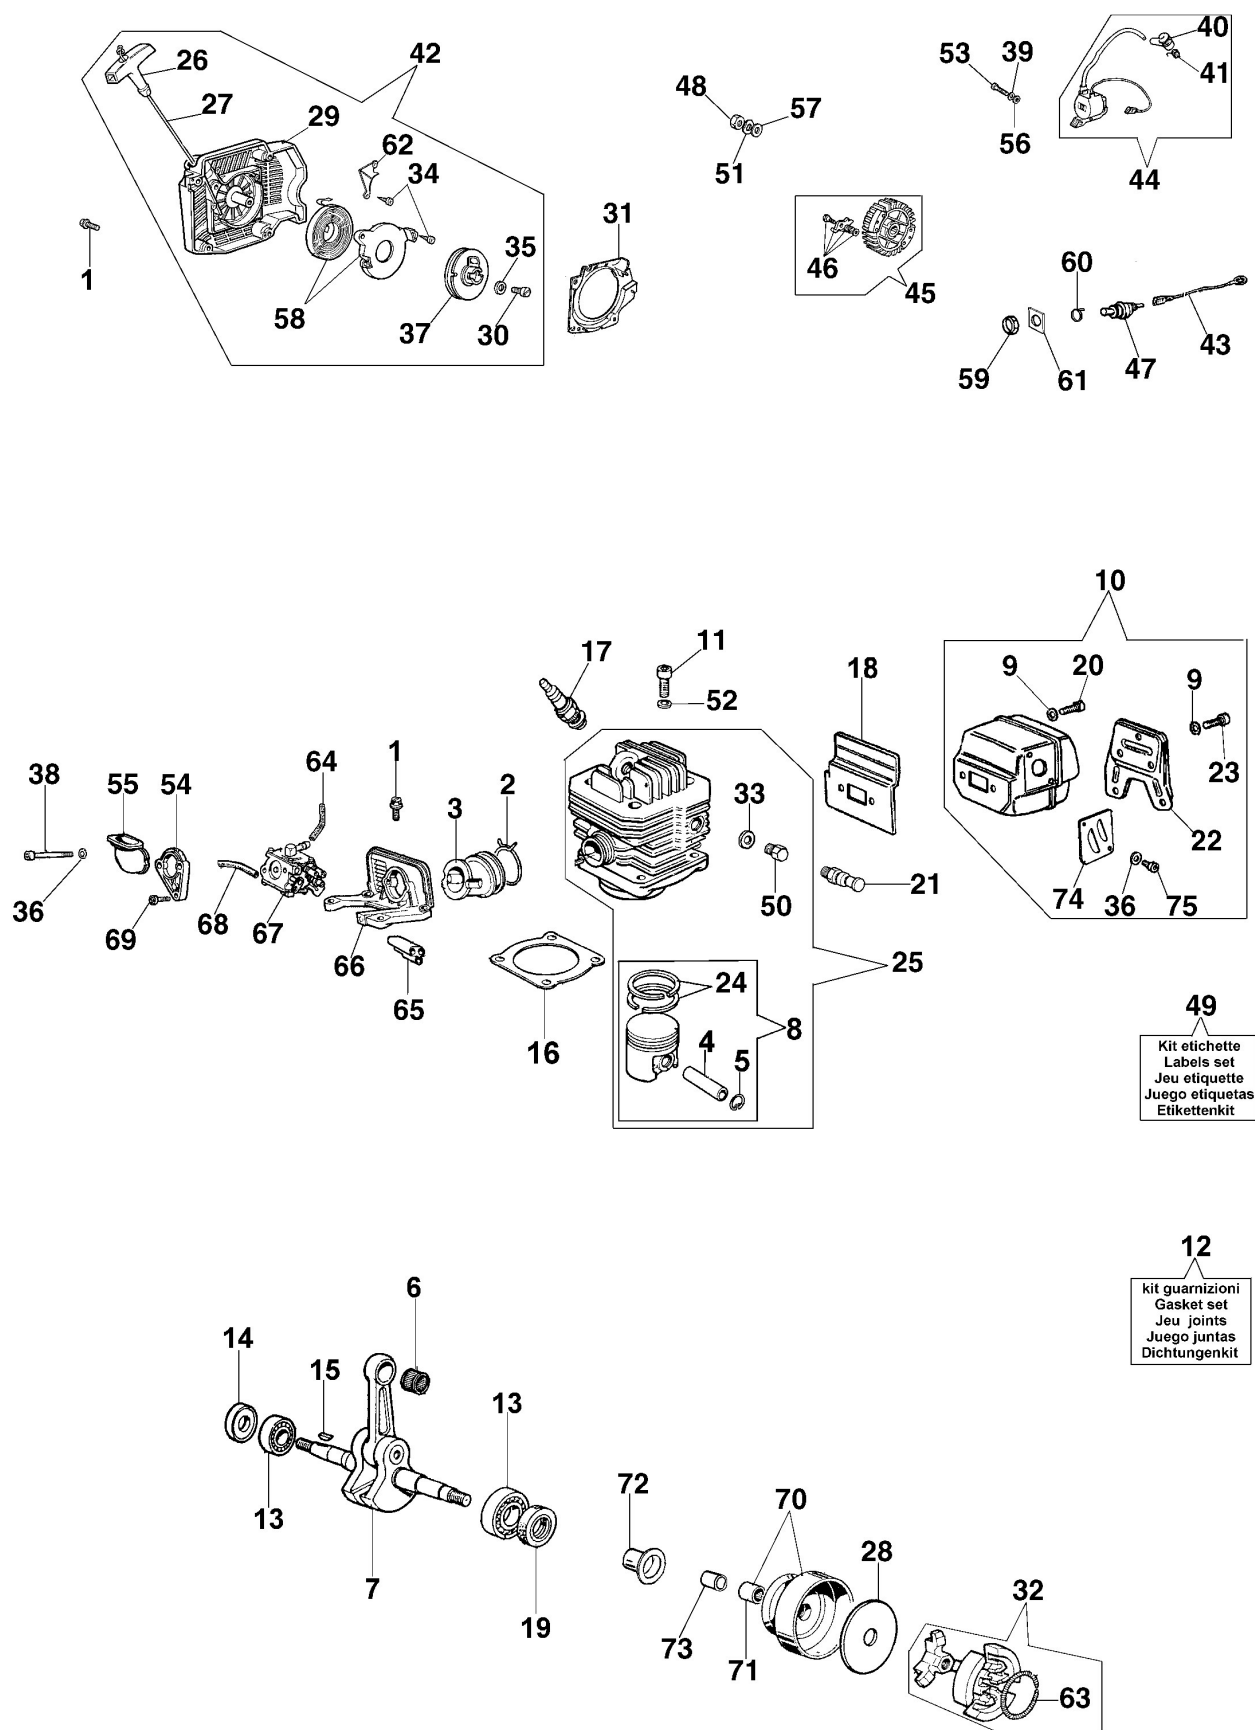


Illustration Starter assy and engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	4	097000092AR	Screw				
2	1	097000059A	Spring				
3	1	098000010	Manifold				
4	1	094500007R	Piston pin				
5	2	007201198R	Ring				
6	1	006000010	Bearing				
7	1	098000001R	Crankshaft				
8	1	098000312B	Piston assy Ø52				
9	5	3033074	Washer				
10	1	52010441A	Muffler				
11	4	005100906AR	Screw				
12	1	097000215A	Gasket set				
13	2	099900006R	Bearing				
14	1	094500004R	Seal ring				
15	1	094500028R	Key				
16	1	52010458AR	Gasket				
17	1	005000019	Spark plug				
18	1	097000094CR	Gasket				
19	1	099900014R	Seal ring				
20	2	3801045R	Screw				
21	1	50010215R	Decompressor				
22	1	097000342A	Cover				
23	3	3801052R	Screw				
24	2	098000004R	Piston ring Ø52				
25	1	50102012F	Complete cylinder				
26	1	52010080R	Handle				
27	1	098000079R	Starter rope				
28	1	097000097	Washer				
29	1	52010495C	Starter kit				
30	1	3908036	Screw				
31	1	097000019C	Flange				
32	1	097000132R	Clutch				
33	1	3078012	Washer				
34	4	3960017AR	Screw				
35	1	3918006	Washer				
36	2	3833073R	Washer				
37	1	097000041A	Pulley				
38	2	61052009BR	Screw				
39	2	006000315R	Washer				
40	1	094600097AR	Spark plug cap				
41	1	094600169AR	Spring				
42	1	52010495C	Starter kit				
43	1	097000121A	Cable				
44	1	52010001R	Ignition coil				
45	1	52010136BR	Flywheel				
46	1	52012027	Pawl kit				

Illustration Starter assy and engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
47	1	094500497R	Switch				
48	1	004000142	Nut				
49	1	52012012	Labels kit				
50	1	52010093	Screw				
51	1	3833080R	Washer				
52	4	3833076	Washer				
53	2	094000227	Screw				
54	1	097000333	Flange				
55	1	52010008A	Manifold				
56	1	3916004R	Washer				
57	1	3916009	Washer				
58	1	098000060AR	Spring				
59	1	099900397	Nut				
60	1	52010132	Plate				
61	1	004000438R	Plate				
62	1	52010180	Cover				
63	1	004900137BR	Spring				
64	1	098000319R	Tube				
65	1	52010189	Screw guide				
66	1	098000057	Support				
67	1	52012116A	Carburetor WJ-104				
68	1	094000215AR	Tube				
69	1	3960057R	Screw				
70	1	52010029AR	Clutch drum				
71	1	52010030	Bearing				
72	1	52010035	Spacer				
73	1	52010034	Bushing				
74	1	098000133	Deflector				
75	2	006000251R	Screw				


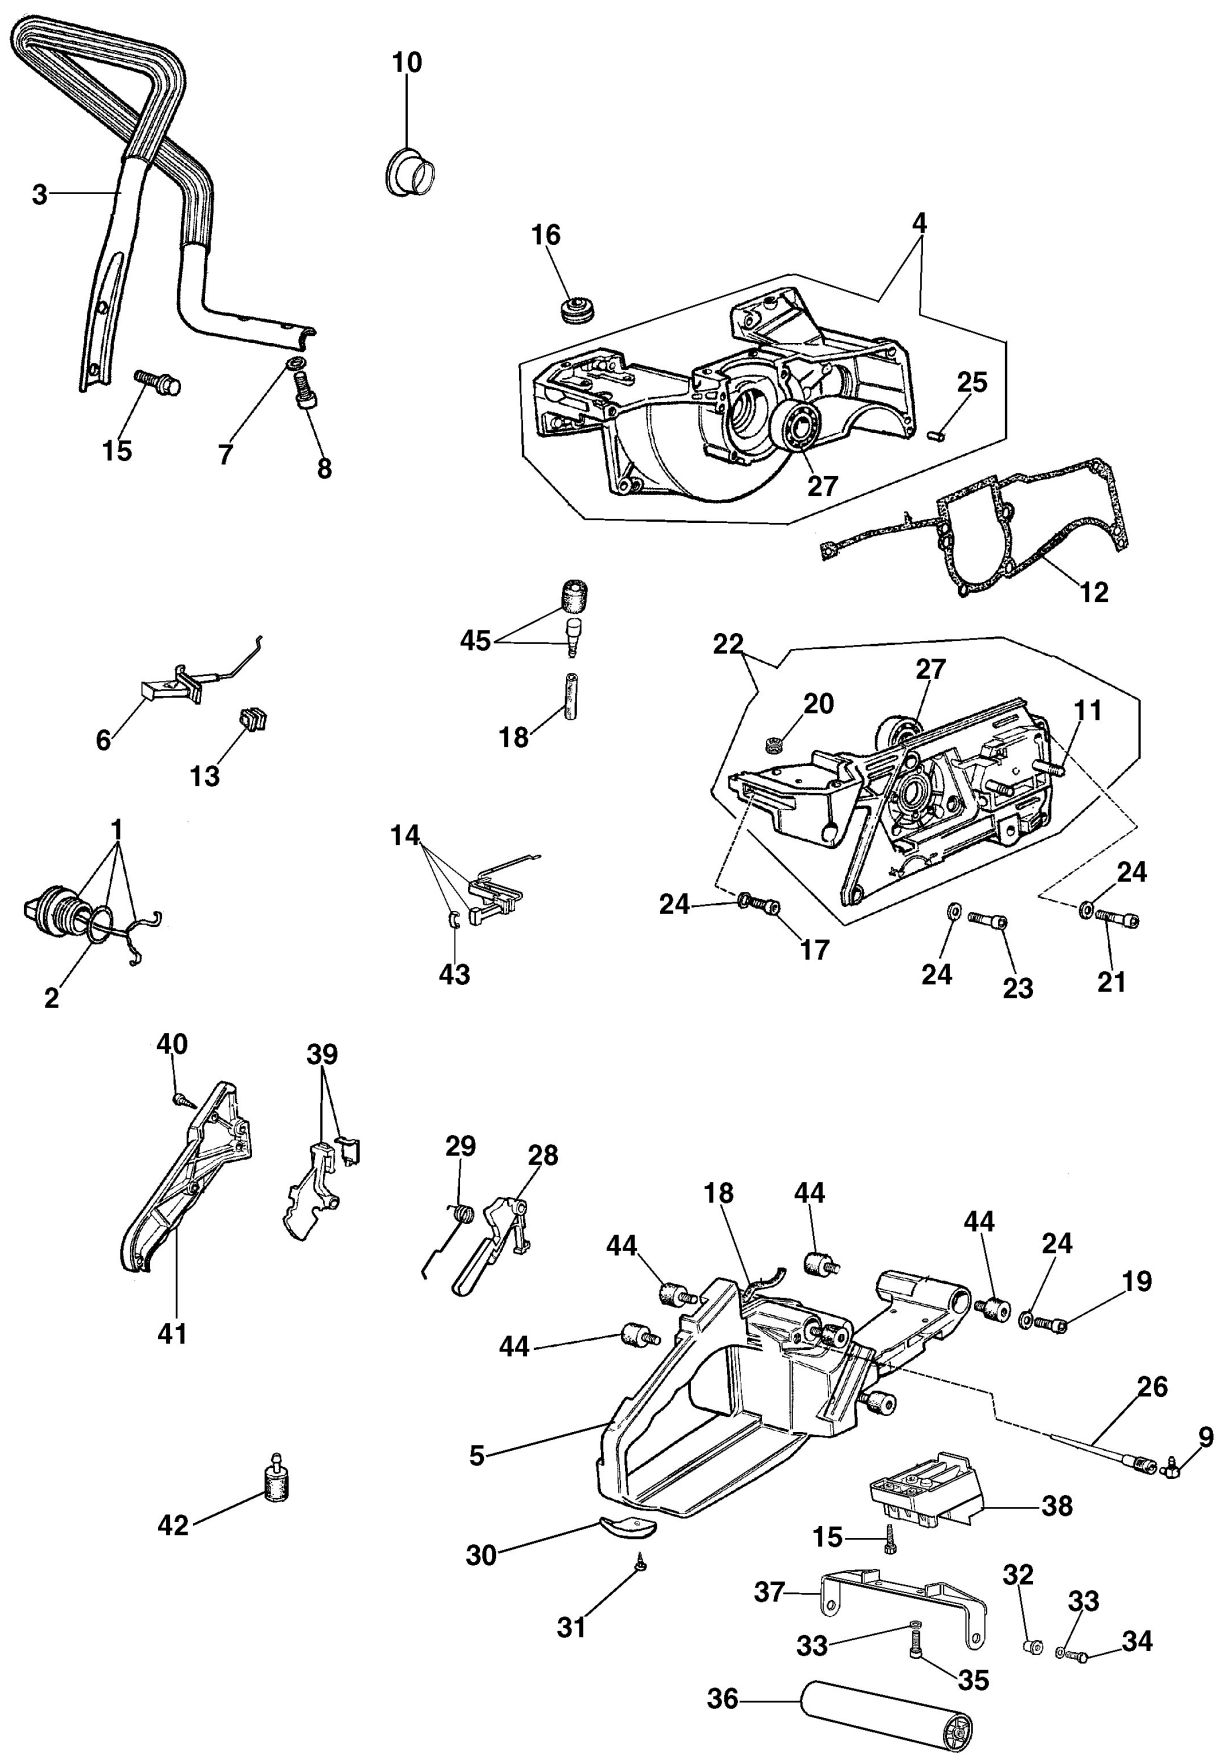


Illustration Crankcase and fuel tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	52010057R	Cap				
2	1	099900090R	Ring				
3	1	52010047	Handle				
4	1	52012111	Crankcase assy				
5	1	50200045BR	Complete tank				
6	1	52010078AR	Starter lever				
7	1	006000102R	Cotter pin				
8	2	3801020	Screw				
9	1	018500066	Fittings				
10	1	52010143A	Tank cap				
11	2	097000080BR	Stud				
12	1	097000009AR	Gasket				
13	1	097000057R	Grommet				
14	1	52012044	Rod				
15	2	097000061AR	Screw				
16	1	52010014B	Filter body				
17	1	093800060B	Screw				
18	1	098000319R	Tube				
19	6	006000251R	Screw				
20	1	52010117	Grommet				
21	2	006100303R	Screw				
22	1	52012111	Crankcase assy				
23	4	3801015R	Screw				
24	7	3833073R	Washer				
25	2	3023008R	Plug				
26	1	018500096	Valve body				
27	2	099900006R	Bearing				
28	1	52010077AR	Lever				
29	1	097000028R	Spring				
30	1	52010004	Guard				
31	1	3960087AR	Screw				
32	2	018100317	Spacer				
33	4	3833076	Washer				
34	2	3960045	Screw				
35	2	3806035R	Screw				
36	1	018100171A	Roller				
37	1	52010098	Support				
38	1	52010215	Support				
39	1	52010092	Throttle kit				
40	3	3960040R	Screw				
41	1	097000024	Cover				
42	1	50010218R	Fuel filter				
43	1	52010134R	Plate				
44	6	52010066R	AV-mount				
45	1	52010082	Breather valve				

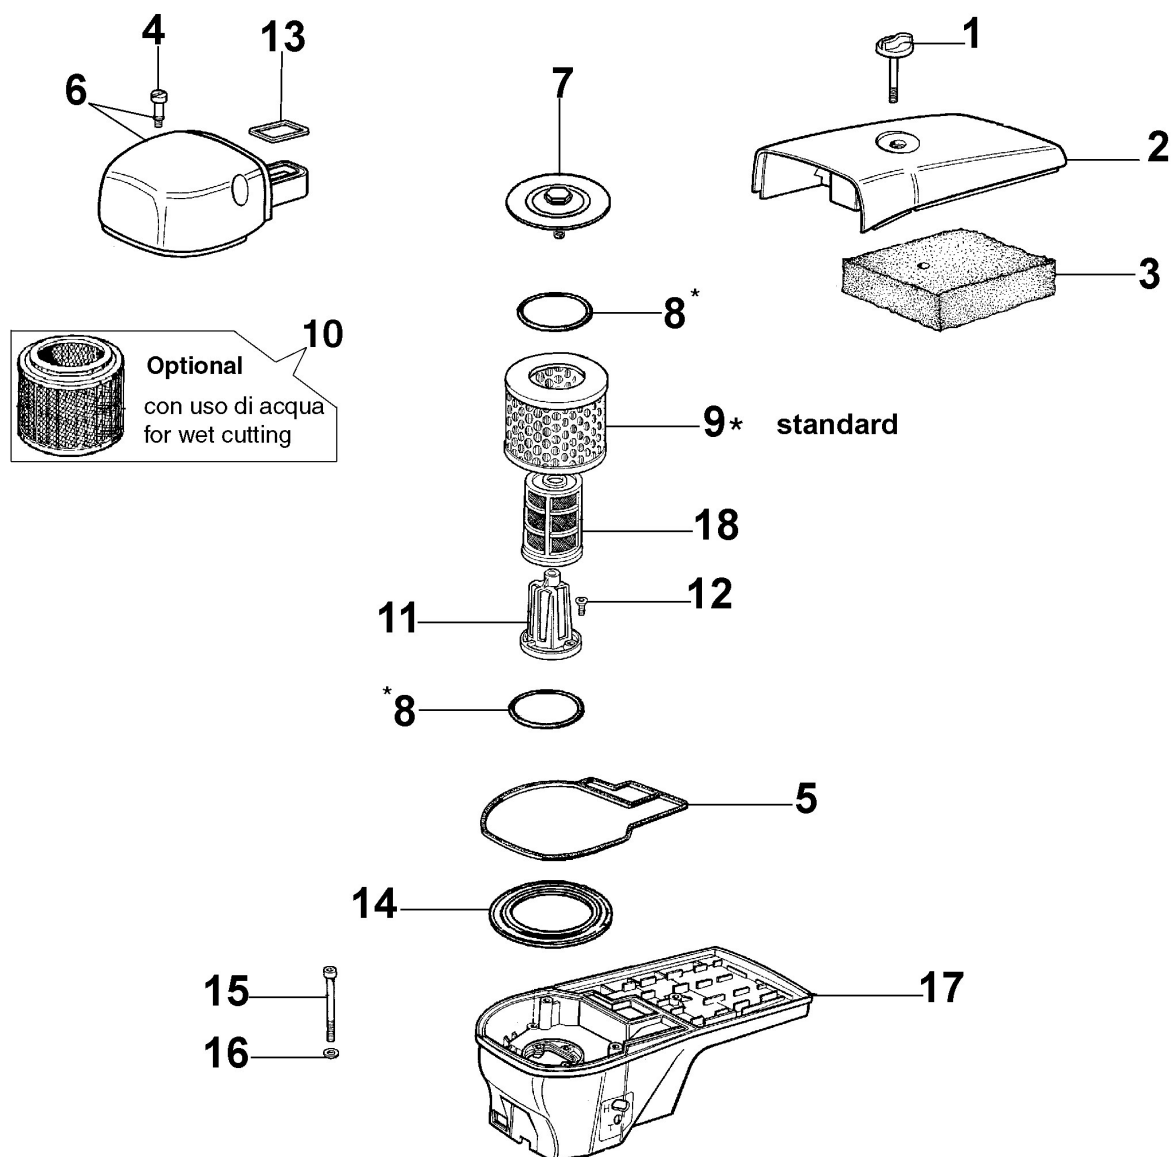

43 ■ KIT RIPARAZIONE
REPAIR KIT

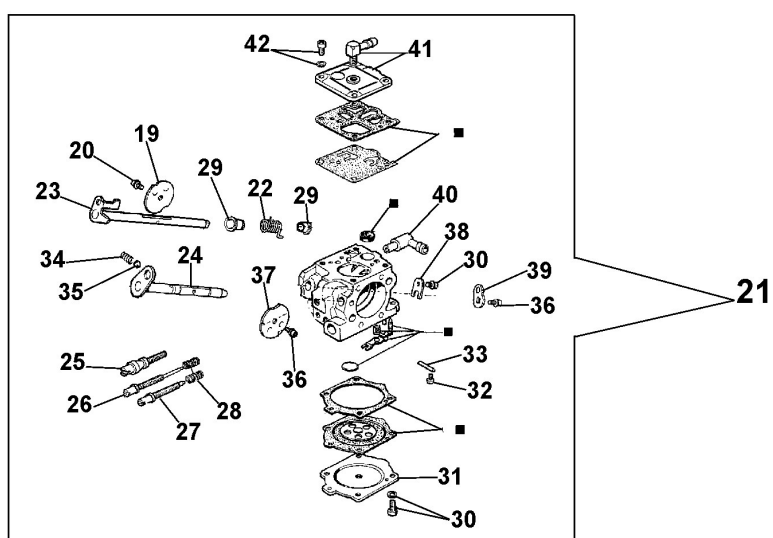


Illustration Air filter and carburettor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	52010041	Knob				
2	1	52010018AR	Cover				
3	1	52010451R	Air filter				
4	3	093000468A	Screw				
5	1	52010059R	Gasket				
6	1	52012004B	Cover				
7	1	52010514R	Flange				
8	2	3049050R	O-ring				
9	1	52010513R	Air filter kit				
10	1	098000297R	Air filter kit				
11	1	52010014B	Filter body				
12	3	3802002A	Screw				
13	1	52010060	Gasket				
14	1	018600090A	Gasket				
15	3	072700182	Screw				
16	3	3833073R	Washer				
17	1	52010016AR	Clutch cover				
18	1	018600056AR	Air filter				
19	1	52010019	Shutter				
20	1	035000160	Screw				
21	1	52012116A	Carburetor WJ-104				
22	1	097000161	Spring				
23	1	097000154	Shaft				
24	1	097000155	Shaft				
25	1	097000162	Screw				
26	1	2318762	Screw H				
27	1	2318761	Screw L				
28	2	097000223	Spring				
29	2	097000224	Bushing				
30	4	035000162	Screw				
31	1	52010007	Cover				
32	1	003300202	Screw				
33	1	035000169	Spindle				
34	1	035000164	Spring				
35	1	006000325	Ball				
36	1	003300209	Screw				
37	1	035000151	Shutter				
38	1	035000149	Plate				
39	1	097000160	Lever				
40	1	003300036	Fittings				
41	1	097000157	Cover				
42	1	035000161	Screw				
43	1	2318672	Repair kit				

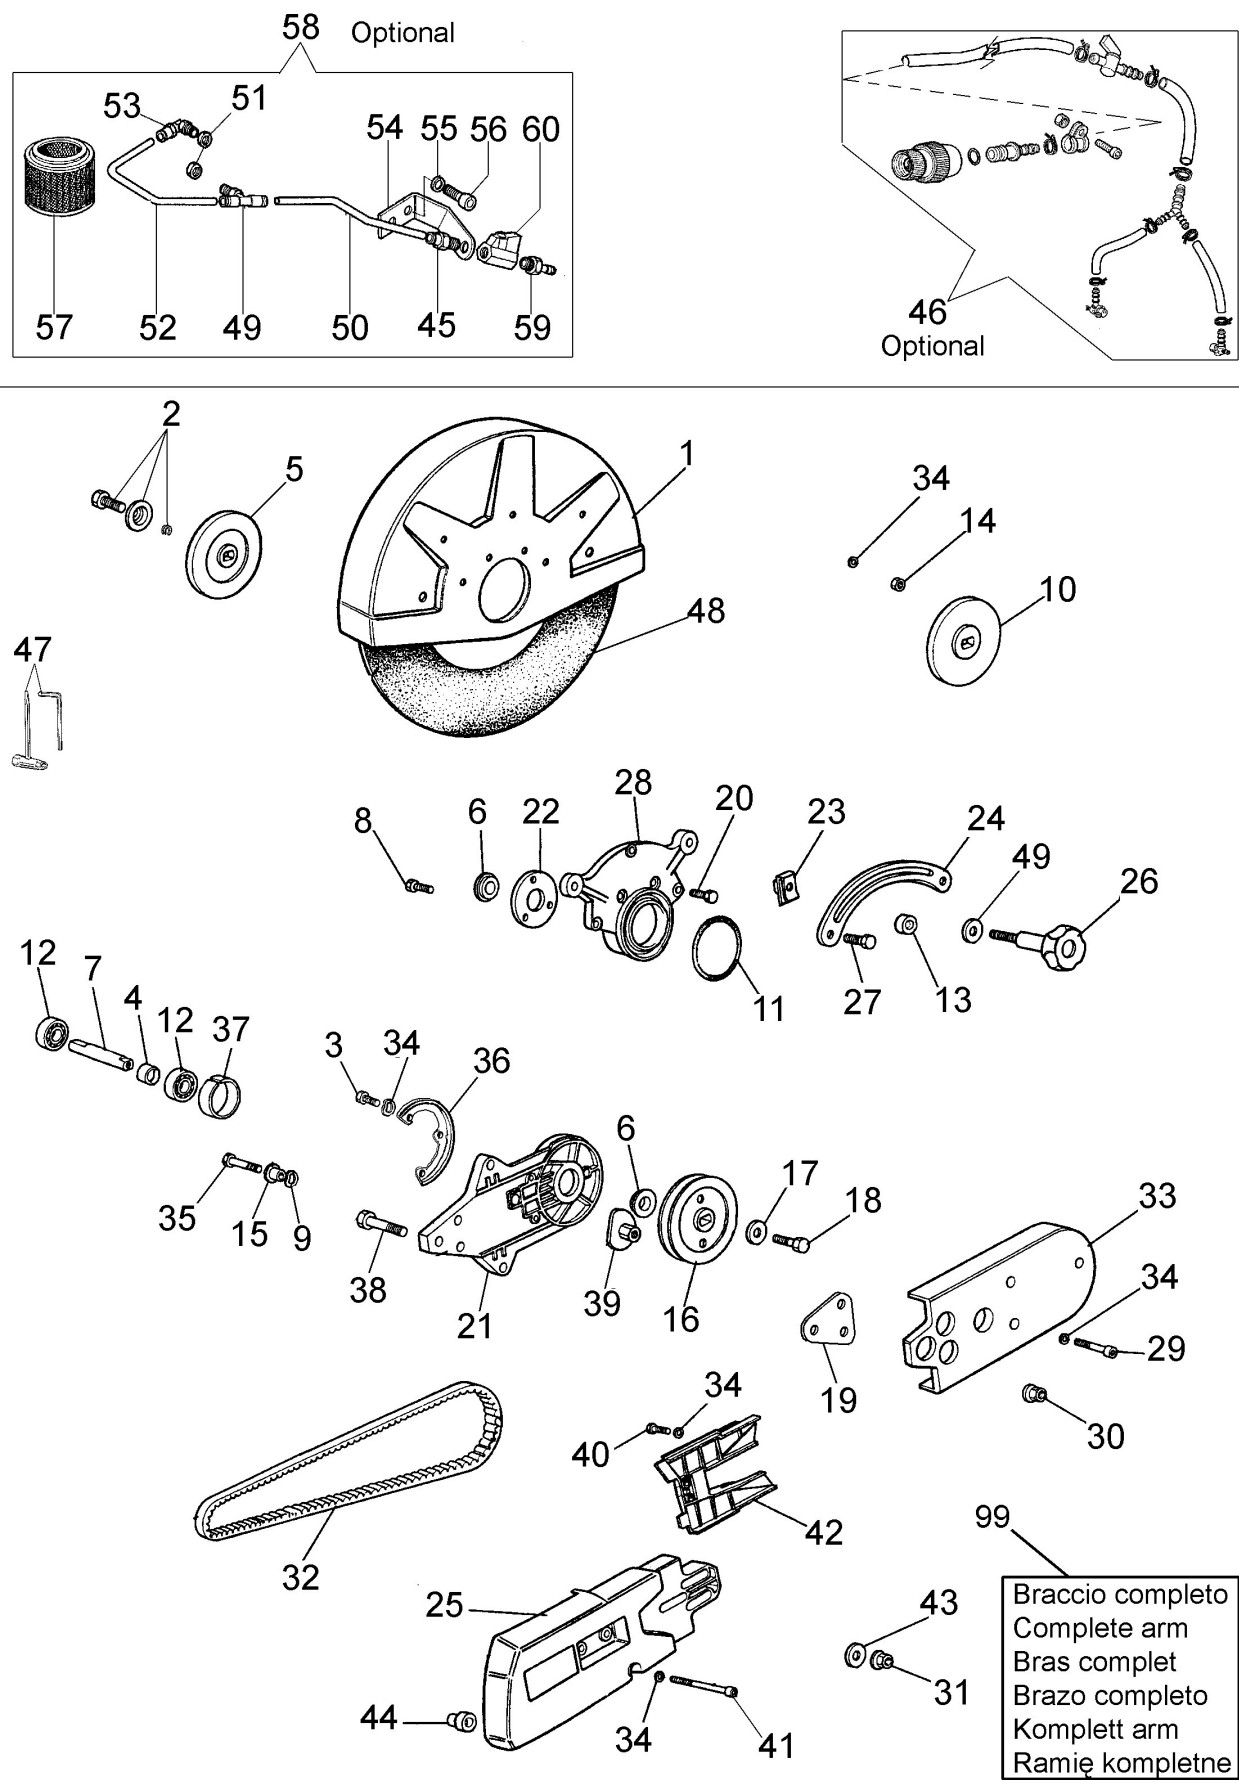


Illustration Arm 12

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	52010071R	Disk cover 12				
2	1	52010177	Screws kit				
3	3	3906019R	Screw				
4	1	52010045	Ring				
5	1	018600235	Flange				
6	2	52010044	Spacer				
7	1	018600019R	Shaft				
8	3	3806022R	Screw				
9	1	005000343	Washer				
10	1	018600236A	Flange				
11	1	018100029	O-ring				
12	2	3035042R	Bearing				
13	1	52010012	Spacer				
14	5	094000251	Nut				
15	1	52010039	Spacer				
16	1	018600004A	Pulley				
17	1	3918013R	Washer				
18	1	3906066R	Screw				
19	1	52010305	Plate				
20	10	3806021AR	Screw				
21	1	52012114R	Arm				
22	1	52010043	Flange				
23	1	52010013	Clamp				
24	1	52010396	Sector				
25	1	52010430	Belt cover				
26	1	52010062AR	Knob				
27	2	3906045R	Screw				
28	1	52010025AR	Support				
29	2	3801016R	Screw				
30	3	3914010R	Nut				
31	2	50010148R	Nut				
32	1	018100180R	Belt				
33	1	52010022AR	Cover				
34	9	3833073R	Washer				
35	1	3906016R	Screw				
36	1	52010211	Guard				
37	1	52010046	Bushing				
38	3	3806076	Screw				
39	1	52010036	Belt tensioner				
40	10	3806021AR	Screw				
41	1	3801067	Screw				
42	1	52010023	Guard				
43	2	3916008R	Washer				
44	1	006000300	Bushing				
45	1	52010104	Shaft joint				
46	1	52012055	Water kit				

Illustration Arm 12

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
47	1	4191240	Tool kit				
48	1	52010170	Disk 12 (cement)				
48	1	52010171	Disk 14 (metal)				
48	1	52010172	Disk 14 (cement)				
48	1	52010169	Disk 12 (metal)				
48	1	018600032	Disk 16 (cement)				
48	1	018600033	Disk 16 (metal)				
49	1	52010105	Fittings				
50	1	52010372	Tube				
51	1	52010107	Lock nut				
52	1	52010108	Tube				
53	1	52010109	Fittings				
54	1	52010087	Bracket				
55	2	3033074	Washer				
56	2	006000024R	Screw				
57	1	098000297R	Air filter kit				
58	1	52010110A	Water kit				
59	1	52010102	Shaft joint				
60	1	52010103	Valve				
99	1	52012035AR	Arm assy 14				

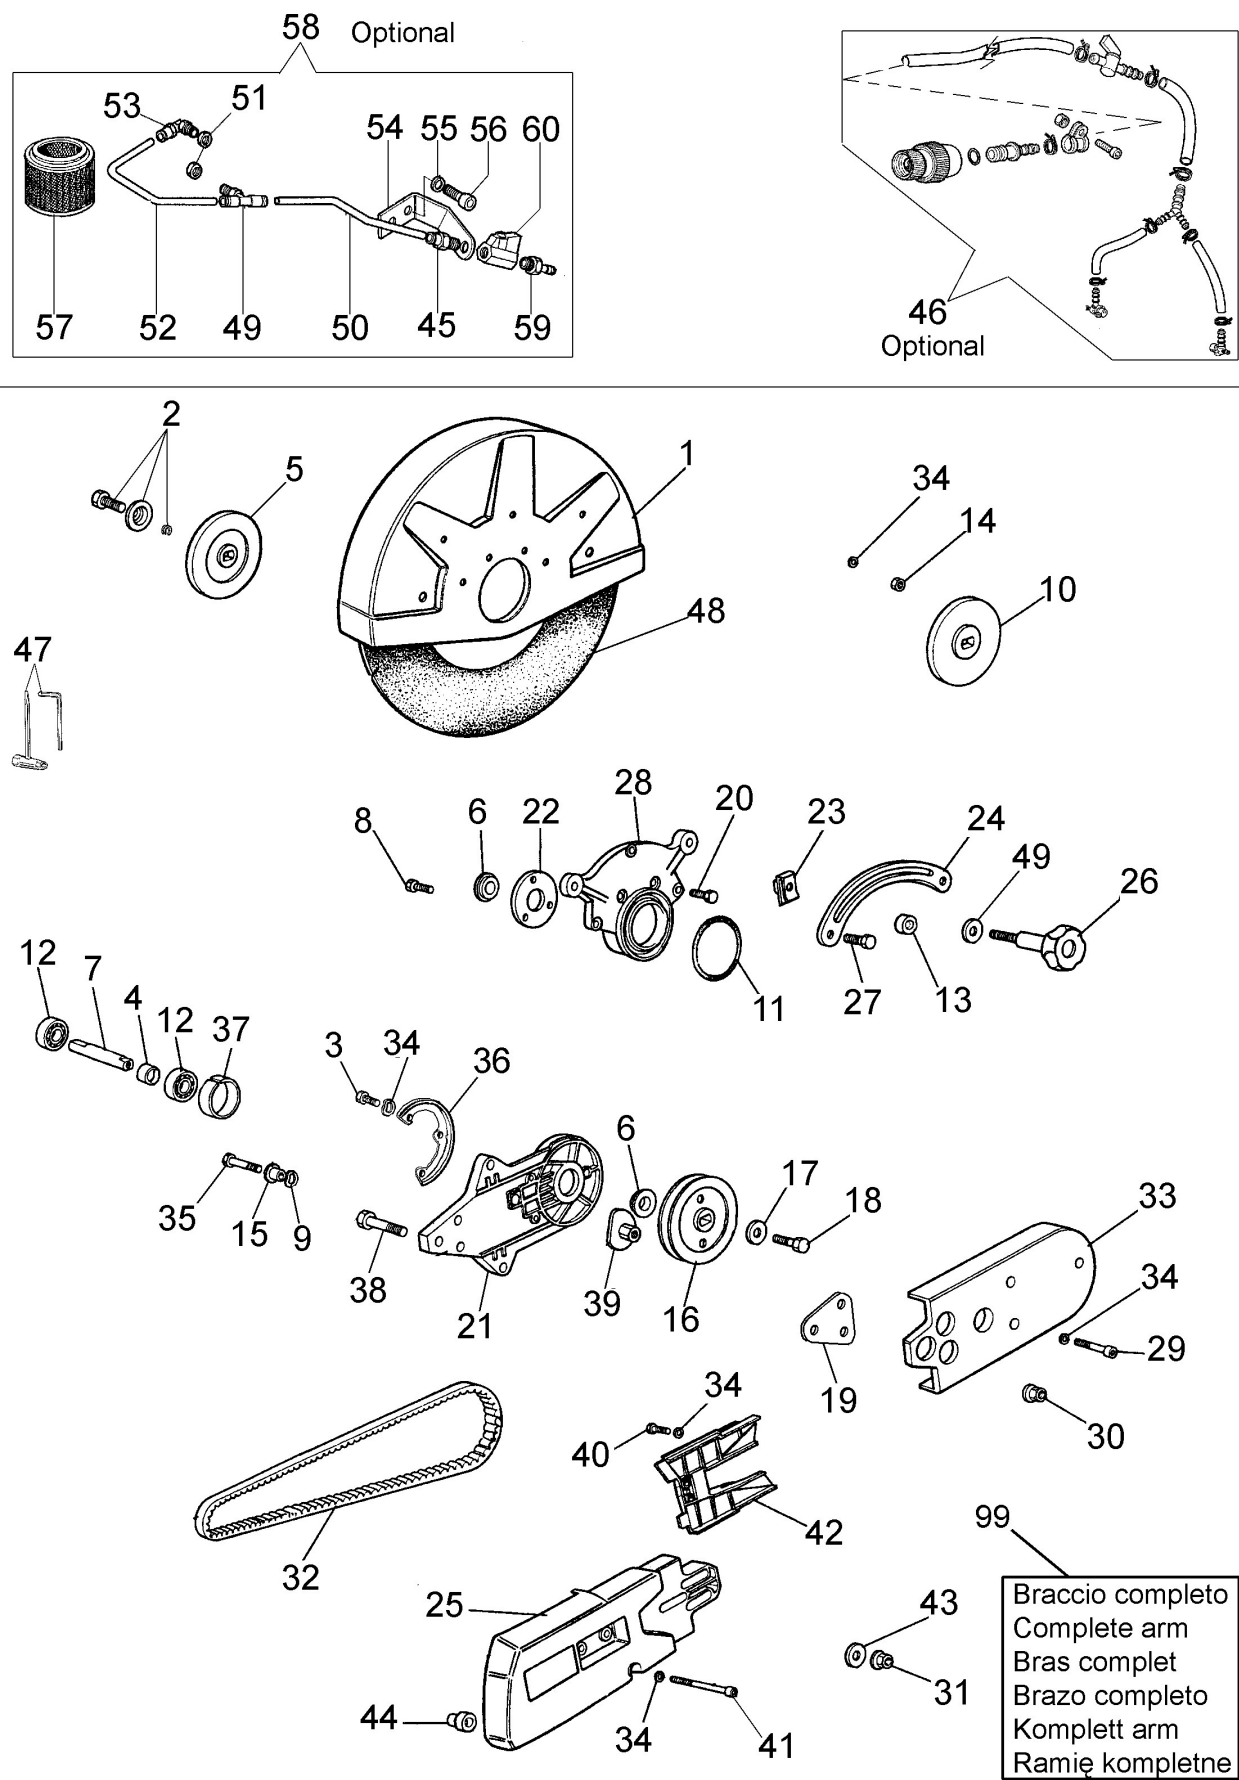


Illustration Arm 14

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	52010026	Disk cover 14				
2	1	52010177	Screws kit				
3	3	3906019R	Screw				
4	1	52010045	Ring				
5	1	018600235	Flange				
6	2	52010044	Spacer				
7	1	018600019R	Shaft				
8	3	3806022R	Screw				
9	1	005000343	Washer				
10	1	018600236A	Flange				
11	1	018100029	O-ring				
12	2	3035042R	Bearing				
13	1	52010012	Spacer				
14	5	094000251	Nut				
15	1	52010039	Spacer				
16	1	018600004A	Pulley				
17	1	3918013R	Washer				
18	1	3906066R	Screw				
19	1	52010305	Plate				
20	10	3806021AR	Screw				
21	1	52012114R	Arm				
22	1	52010043	Flange				
23	1	52010013	Clamp				
24	1	52010396	Sector				
25	1	52010430	Belt cover				
26	1	52010062AR	Knob				
27	2	3906045R	Screw				
28	1	52010025AR	Support				
29	2	3801016R	Screw				
30	3	3914010R	Nut				
31	2	50010148R	Nut				
32	1	018100180R	Belt				
33	1	52010022AR	Cover				
34	9	3833073R	Washer				
35	1	3906016R	Screw				
36	1	52010211	Guard				
37	1	52010046	Bushing				
38	3	3806076	Screw				
39	1	52010036	Belt tensioner				
40	10	3806021AR	Screw				
41	1	3801067	Screw				
42	1	52010023	Guard				
43	2	3916008R	Washer				
44	1	006000300	Bushing				
45	1	52010104	Shaft joint				
46	1	52012055	Water kit				

Illustration Arm 14

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
47	1	4191240	Tool kit				
48	1	52010170	Disk 12 (cement)				
48	1	52010171	Disk 14 (metal)				
48	1	52010172	Disk 14 (cement)				
48	1	52010169	Disk 12 (metal)				
48	1	018600032	Disk 16 (cement)				
48	1	018600033	Disk 16 (metal)				
49	1	52010105	Fittings				
50	1	52010372	Tube				
51	1	52010107	Lock nut				
52	1	52010108	Tube				
53	1	52010109	Fittings				
54	1	52010087	Bracket				
55	2	3033074	Washer				
56	2	006000024R	Screw				
57	1	098000297R	Air filter kit				
58	1	52010110A	Water kit				
59	1	52010102	Shaft joint				
60	1	52010103	Valve				
99	1	52012006AR	Arm assy 14				

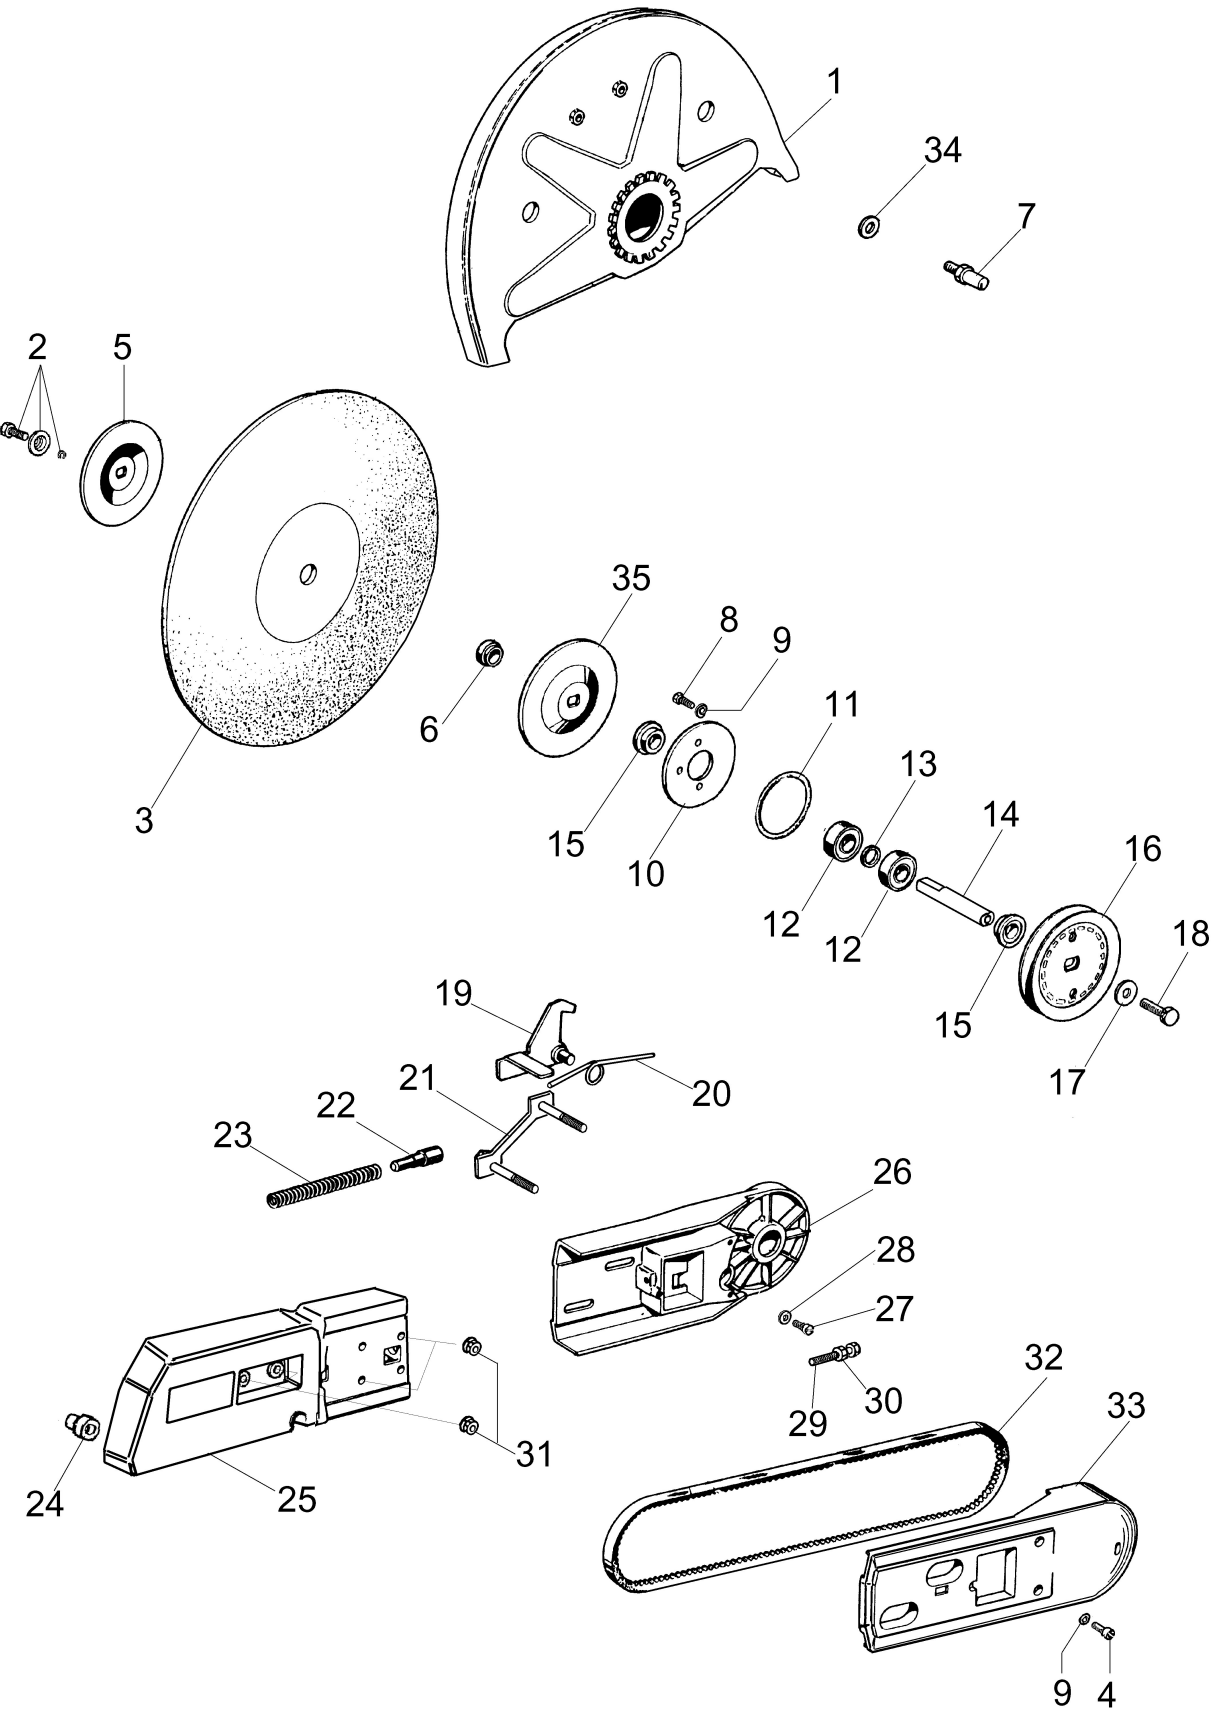


Illustration Arm 16

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	52010216AR	Disk cover 16				
2	1	52010177	Screws kit				
3	1	018600032	Disk 16 (cement)				
3	1	018600033	Disk 16 (metal)				
4	3	006000624	Screw				
5	1	018600235	Flange				
6	1	018600017A	Spacer				
7	1	018100251	Pin				
8	4	3806022R	Screw				
9	7	3833073R	Washer				
10	1	018100012	Flange				
11	1	018100029	O-ring				
12	2	3035042R	Bearing				
13	1	018100020	Ring				
14	1	018600019R	Shaft				
15	1	018600237	Spacer				
16	1	018600004A	Pulley				
17	1	3918013R	Washer				
18	1	3906066R	Screw				
19	1	018100015	Pawl				
20	1	018100038	Spring				
21	1	018600009	Bracket				
22	1	018600015	Pin				
23	1	018600030	Spring				
24	1	006000300	Bushing				
25	1	52010431	Belt cover				
26	1	018600001	Arm				
27	1	006000156R	Screw				
28	1	094500034R	Washer				
29	1	3906066R	Screw				
30	1	094600112	Nut				
31	4	50010148R	Nut				
32	1	018600031R	Belt				
33	1	018600003	Cover				
34	2	3916006R	Washer				
35	1	018600236A	Flange				